



Part #: REMLFLCDIGN

The AIMS Power ignition/toggle relay switch allows an inverter to be powered using the vehicle's ignition or any trigger switch and can only be used with AIMS Power's inverter chargers that have a part number starting with PICOGLFXXXXXX. The relay box allows the inverter to be powered using the vehicle's 12V ignition.

1. Connect the NEGATIVE (-) port to the NEGATIVE (-) battery terminal.
2. Connect the 12V Ignition to the POSITIVE (+) battery terminal (or toggle).
3. Connect the included RJ45 cord into the inverter's remote port if using an REMOTELF.

*Recommended cable size: 18 AWG. 7A MAX




*****NOTE***** When using the inverter, the power switch must be in the OFF position to use this device.




AIMS Power™

www.aimscorp.net

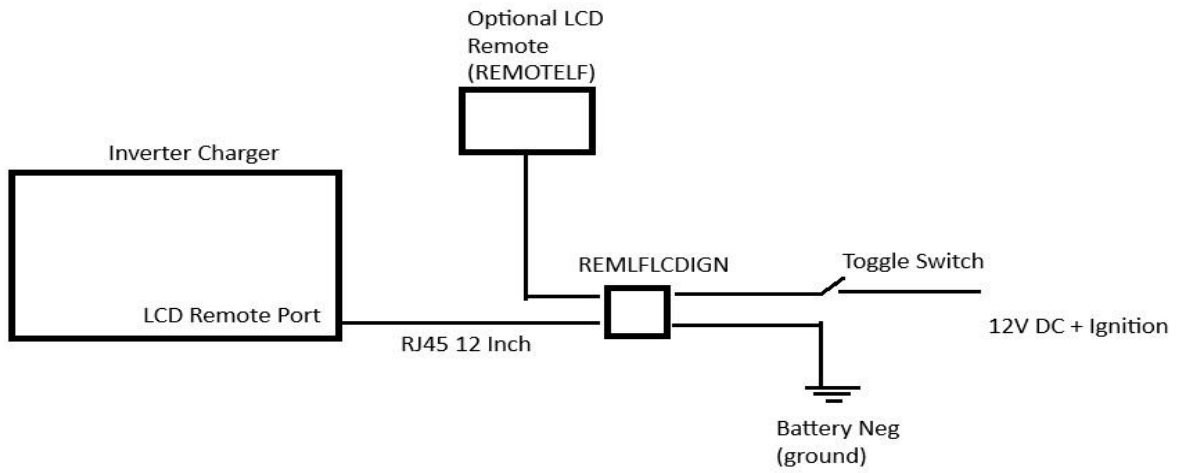

AIMS Ignition Relay - REMLFLCDIGN

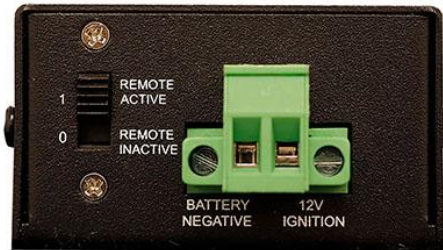

AIMS Inverter Charger 12Vdc



AIMS REMOTELF

NOTE: REMOTELF is optional.